


# Hy-Lok Push-On Hose Fittings


- Easy Assembly
- Reusable
- Hy-Lok Tube Adapter
- No Special Tools
- Saves Time and Cost

## Tube Adapter

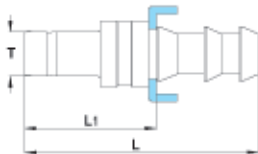


| Part Number    | Hose Size | T<br>Tube<br>O.D. | L<br>Overall<br>Length | L <sub>1</sub><br>Cut-off<br>Length |
|----------------|-----------|-------------------|------------------------|-------------------------------------|
| H-POTA 4 - 4   | 4         | 1/4"              | 1.91"                  | 1.15"                               |
| H-POTA 6 - 6   | 6         | 3/8"              | 2.02"                  | 1.15"                               |
| H-POTA 8 - 8   | 8         | 1/2"              | 2.42"                  | 1.37"                               |
| H-POTA 4 - 6M  | 4         | 6mm               | 48.5mm                 | 29.2mm                              |
| H-POTA 6 - 10M | 6         | 10mm              | 51.3mm                 | 29.2mm                              |
| H-POTA 8 - 12M | 8         | 12mm              | 61.5mm                 | 34.8mm                              |

## Male Adapter

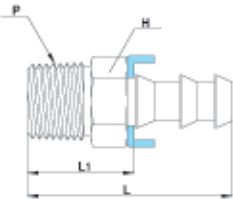

| Part Number<br>NPT (ISO R7/1) | Hose Size | P<br>NPT/ISO<br>Pipe<br>Threads | H<br>Hex<br>Flat | L<br>Overall<br>Length | L <sub>1</sub><br>Cut-off<br>Length |
|-------------------------------|-----------|---------------------------------|------------------|------------------------|-------------------------------------|
| H-POMA 4 - 4N(R)              | 4         | 1/4"                            | 9/16"            | 1.68"                  | 0.92"                               |
| H-POMA 6 - 4N(R)              | 6         | 1/4"                            | 11/16"           | 1.80"                  | 0.93"                               |
| H-POMA 6 - 6N(R)              | 6         | 3/8"                            | 11/16"           | 1.80"                  | 0.93"                               |
| H-POMA 8 - 8N(R)              | 8         | 1/2"                            | 7/8"             | 2.19"                  | 1.15"                               |

## Straight Union

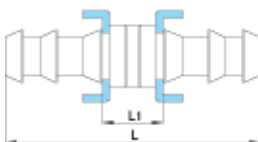

| Part Number | Hose Size | L<br>Overall<br>Length | L <sub>1</sub><br>Cut-off<br>Length |
|-------------|-----------|------------------------|-------------------------------------|
| H - POU - 4 | 4         | 2.07"                  | 0.55"                               |
| H - POU - 6 | 6         | 2.25"                  | 0.52"                               |
| H - POU - 8 | 8         | 2.61"                  | 0.52"                               |

### ■ HOW TO ORDER

Use S316 for 316 Stainless Steel or BRAS for Brass as a suffix to the Part Number.  
Example : H - POTA 6 - 6 - S316

## ASSEMBLY

1. Lubricate fitting with light oil.
2. Push hose onto fitting until hose bottoms into plastic cap.

### ■ TYPE APPROVALS (for Hy-Lok Tube Fittings)



American Bureau Shipping  
CERTIFICATE NO.00-6X50288-X



Lloyd's Register  
CERTIFICATE NO.01/10075



GERMANISCHER LLOYD  
CERTIFICATE NO.57798-91 HH



DET NORSKE VERITAS  
CERTIFICATE NO.P-9100



Distributed by :

www.hy-lok.com